

Air Percussive Chipping Hammer


"A" Series and "W" Series

Parts Information





"A" Series and "W" Series Chipping Hammer Exploded Diagram

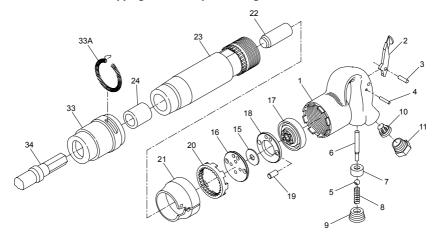

(Dwg. TPC310-3)

"A" Series and "W" Series Chipping Hammer Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
1	Grip Handle	HH-1B	18	Valve Spacer	HH-8A
2	Throttle Lever	C-134	19	Dowel Pin (2)	HH-32
3	Throttle Lever Pin	C-15	20	Locking Ring	HH-196A
4	Throttle Lever Stop Pin	H02-74	21	Exhaust Deflector	HH-85AP
++ 5	Throttle Valve Ball	HH-602A	22	Piston	
++ 6	Throttle Valve Plunger	HH-604A	1	for Model 1A, 2A, W1 or W2	
++ 7	Throttle Valve Plunger Bushing	HH-603A	1	Standard (2-5/8") HH	
++8	Throttle Valve Spring	HH-51	1	.004" oversize	HH1-5-4
9	Throttle Valve Cap	HH-266	1	.008" oversize	HH1-5-8
10	Air Strainer	834-61	1	.012" oversize HH1-5	
11	Inlet Bushing		1	for Model 3A, 4A, W3 or W4	
	Standard (7/8"-24 x 3/8" NPT)	H-282	1	Standard (2-15/16")	HH4-5
	.012" oversize	H-282-12	1	.004" oversize	HH4-5-4
15	Valve	HH-2A	1	.008" oversize	HH4-5-8
16	Valve Seat	HH-3	1	.012" oversize	HH4-5-12
17	Valve Cap	HH-4	1	.016" oversize	HH4-5-16

⁺⁺ Items 5 through 8 are not compatible with tools that have serial numbers that begin with SA, SB, SC, ... through SP.

2 16574329_ed3

"A" Series and "W" Series Chipping Hammer Parts List

ltem	Part Description	Part Numbe				
23	Barrel Assembly					
+	Barrel Grooved to accept Arrow, Ajax and other commercial Retainers; with Hexagon Nozzle					
	for Model 1	HH1-AH106				
	for Model 1-EU	HH1-EU-AH10				
	for Model 2	HH2-AH106				
	for Model 2-EU	HH2-EU-AH10				
	for Model 3	HH3-AH106				
	for Model 3-EU	HH3-EU-AH10				
	for Model 4	HH4-AH106				
	for Model 4-EU	HH4-EU-AH10				
	Barrel Grooved to accept Arrow, Ajax and other commercial Retainers; with Round Nozzle	·				
	for Model 1	HH1-AR106				
	for Model 1-EU	HH1-EU-AR10				
	for Model 2	HH2-AR106				
	for Model 2-EU	HH2-EU-AR10				
	for Model 3	HH3-AR106				
	for Model 3-EU	HH3-EU-AR10				
	for Model 4	HH4-AR106				
	for Model 4-EU	HH4-EU-AR10				
+	Barrel Threaded to accept Ingersoll Rand Retainer (27); with Hexagon Nozzle					
	for Model W1	HHW1-AH6				
	for Model W1-EU	HHW1-EU-AH				
	for Model W2	HHW2-AH6				
	for Model W2-EU	HHW2-EU-AH				
	for Model W3	HHW3-AH6				
	for Model W3-EU	HHW3-EU-AH				
	for Model W4	HHW4-AH6				
	for Model W4-EU	HHW4-EU-AH				
	Barrel Threaded to accept Ingersoll Rand Retainer (27); with Round Nozzle					
	for Model W1	HHW1-AR6				
	for Model W1-EU	HHW1-EU-AR				
	for Model W2-EU	HHW2-EU-AR				
	for Model W3	HHW3-AR6				
	for Model W3-EU	HHW3-EU-AR				
	for Model W4	HHW4-AR6				
	for Model W4-EU	HHW4-EU-AR6				
24	Nozzle (Standard Size)					
	Hexagon	B01-7B				
	Round	B01-19B				
*	Warning Label (for models ending in S, SA, A1 or A2 only)	WARNING-6-9				
*	Oversized Hexagon Nozzle (.0005" oversize)	B01-7B-5				


Not illustrated.

16574329_ed3 3

Barrel Assemblies with Hexagon nozzles are shipped unassembled. The Hexagon Nozzle is included but must be installed in the Barrel.
This requires a 50 ton press. See Assembly of the Handle, Throttle Mechanism and Nozzle on Air Hammers Maintenance Information Manual Form 16574246.

Retainer Type Chipper with Threaded Barrel Exploded Diagram


(for "W" Series)

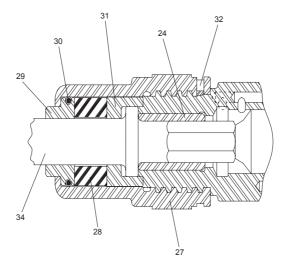

(Dwg. TPD275)

Arrow Quick-Change Retainer Exploded Diagram

(for "A" Series)

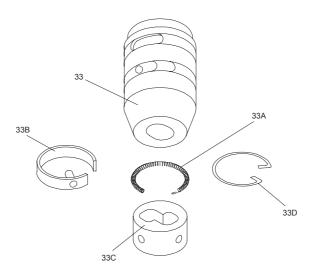

(Dwg. TPD416)

4 16574329_ed3

"A" Series and "W" Series Retainer Assembly Parts List

Item	Part Description	Part Number	
	Chisel Retainer Assembly (for "W" Series)	HHW1-A300	
27	Chisel Retainer	HHW1-300	
28	Rubber Buffer	H3R-203	
29	Lower Buffer Washer (2 pieces)	HHW1-213	
30	Lower Buffer Washer Ring	R000A2-103	
31	Upper Buffer Washer (2 pieces)	H3R-31	
32	Chisel Retainer Lock Spring	24SR-207	
33	Arrow Retainer Plain Type (illustrated on Page 17) (for "A" Series)	HH1-1190	
33	Arrow Quick-Change Type (illustrated above) (for "A" Series)	HH1-1191	
33A	Lock Spring (for HH1-1190 and HH1-1191 Retainers)	HH1-1194	
33B	Flat Spring and Pin (for No. HH1-1191 Retainer)	HH1-1191-2A	
33C	Rotating Insert (for No. HH1-1191 Retainer)	HH1-1191-3	
33D	Insert Spring (for No. HH1-1191 Retainer)	HH1-1191-4	
34	Accessory (Ingersoll Rand offers a complete line of Chisels in a variety of Blades, Calking Tools, Beading Tools, Jacksets, Auto Jacksets and Star Drills. Inquire at nearest Office for types and prices)		
*	Hose Nipple (1/2" hose to 1/4" male pipe)	H02-46	
*	Muffler Assembly	HHW1-A674	
*	Small Clamp	HHW1-675	
*	Large Clamp	HHW1-676	
*	Quick-Change Retainer (for "A" Series)	HH1-3400-3	
*	Quick-Change Retainer (for "W" Series)	HHW1-3450	
*	Economy Type Retainer (for "W" Series)	HHW2-200	
*	Tapered Retainer (for "A" Series)	HH1-1197-IRC2	
*	Plastic Lock Ring (for "A" Series)	ER-1194	
*	Swivel Inlet	HH1-A165	

^{*} Not illustrated.

Maintenance Tools

Tool number for ordering	Tool name for ordering	Operation
34SR-54	Exhaust Deflector Pliers	Removing and installing Exhaust Deflector (21).
H02-119	Nozzle Ejection Arbor	Remove Nozzle (24) from the Barrel (23).
HH-607	Throttle Valve Guide Inserting Tool	Installing the Throttle Valve Guide (8) in the Inserting Tool Grip Handle (1).

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand Office or Distributor.

Related Documentation

For additional information refer to: Product Safety Information Manual 04581450. Product Information Manual 16574162. Maintenance Information Manual 16574246.

Manuals can be downloaded from www.ingersollrandproducts.com.

16574329_ed3 5

Notes:			

Notes:			

