


c22222

3/8" AIR LUBRICATOR

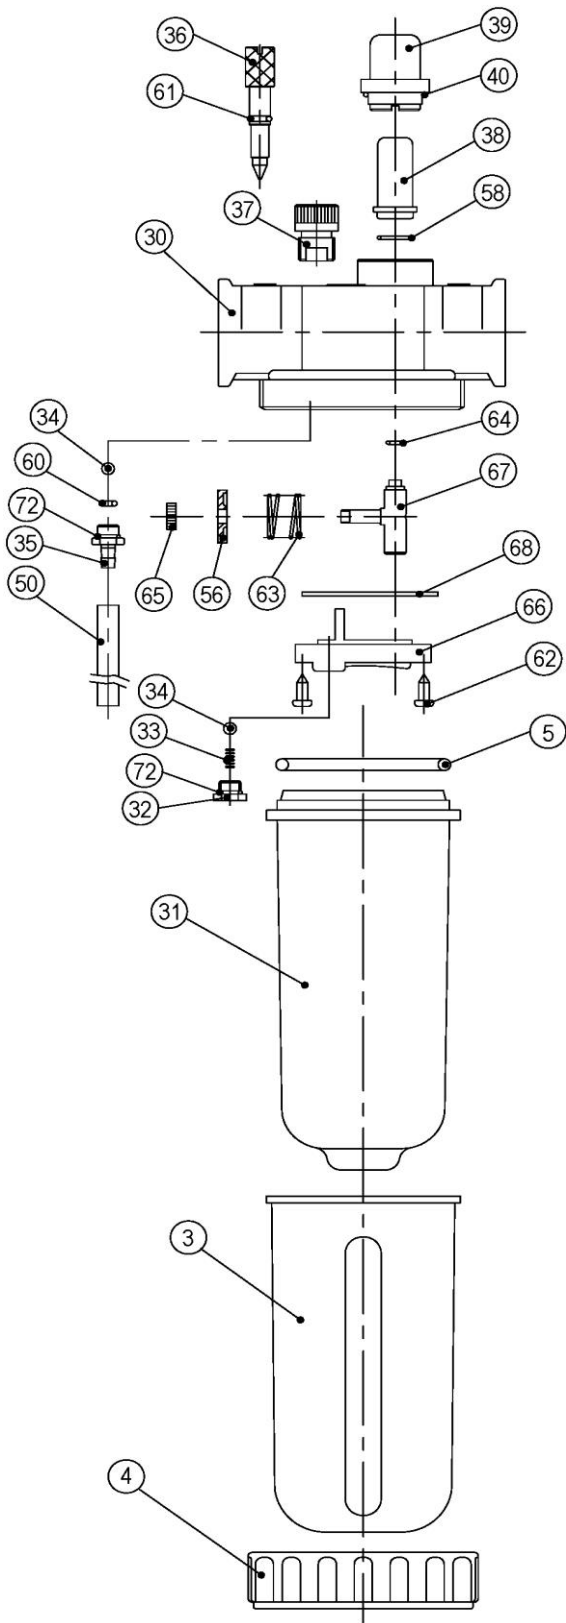

PARTS LIST

No.	Parts No.	Description	Q'ty
3	c22228-03	Shatterguard	1
4	c22228-04	Fixed Ring	1
5	c22228-05	O Ring	1
30	c22222-30	Body	1
31	c22228-31	Bowl	1
32	c22228-32	Nut	1
33	c22228-33	Spring	1
34	c22228-34	Ball	2
35	c22228-35	Plug	1
36	c22228-36	Adjusting Screw	1
37	c22228-37	Fill Plug	1
38	c22228-38	Inside Cup	1
39	c22228-39	Outside Cup	1
40	c22228-40	O Ring	1
50	c22228-50	Tube	1
56	c22228-56	Adjusting Ring	1
58	c22228-58	O Ring	1
60	c22228-60	O Ring	1
61	c22228-61	O Ring	1
62	c22228-62	Screw (M3x0.5Px12L)	2
63	c22228-63	Spring	1
64	c22228-64	O Ring	1
65	c22228-65	Screw	1
66	c22228-66	Mounting	1
67	c22228-67	Frisket	1
68	c22228-68	Gasket	1
72	c22228-72	O Ring	2