



Air Impact Wrench


2945 and 2950

Parts Information





2945 and 2950 Air Impact Wrench Exploded Diagram

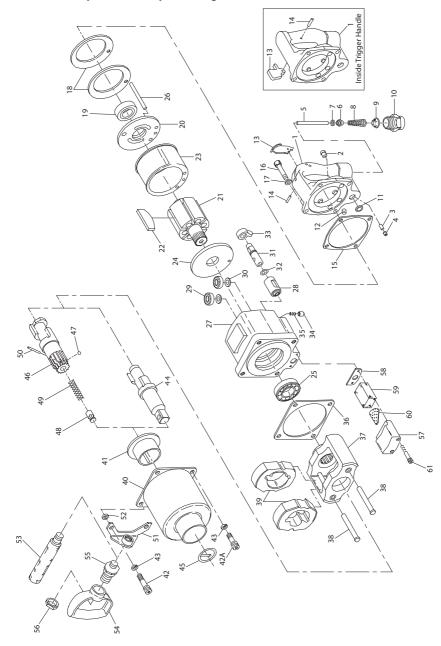

(Dwg. TPA1335)

2 04584462_ed3

2945 and 2950 Air Impact Wrench Parts List

ltem	Part Description	Part Number	Item	Part Description	Part Number
1	Throttle Handle Assembly		39	Hammer (2)	
	with Outside Trigger	2950-A1	!	for 2945	2945-724
	with Inside Trigger	2950-A92		for 2950	2950-724
2	Grease Fitting	130SR-188	40	Hammer Case Assembly	
† 3	Oiler Felt	R2-75	!	for 2945A7, 2945B7 and 2945B1	2945-A627
4	Oiler Adjusting Screw	R2-71	!	for 2945A7-EU and 2945B7-EU	2945-EU-A627
5	Throttle Valve Plunger	2950-302	!	for 2950A7 and 2950B7	2950-A727
6	Throttle Valve Assembly	2934-A50		for 2950A7-EU and 2950B7-EU	2950-EU-A727
†•7	Throttle Valve Face	2934-159	++ 41	Hammer Case Bushing	2950-541
8	Throttle Valve Spring	834-51	*	Hammer Case Label	
†•9	Air Strainer Screen	434-61	!	for models ending in -EU	EU-99
10	Straight Inlet	845-565		for all other models	WARNING-2-99
†•11	Reverse Valve Seal	R00BR-210	42	Hammer Case Cap Screw (3/8"-16 thread x	2945-638
# 12	Oil Chamber Plug (2)	ROH-377	72	1-3/4") Socket Head (Long) (2)	2545-050
13	Trigger		42A	Hammer Case Cap Screw (3/8"-16 x 1-1/2")	844-638
	Outside-type	844-78		Socket Head (Short) (2)	
	Inside-type	834-93A	43	Lock Washer (4)	845-58
14	Trigger Pin		44	1-1/2" Square Drive Anvil	
	for Outside Trigger	F02-15		for 2945	2945-726
	for Inside Trigger	534-265		for 2950	2950-726
†•15	Handle Gasket	850-283	45	Socket Retaining Ring (for use with 1-1/2"	RR10020S
1.0	Handle Cap Screw (5/16"-18 thread x	024 620	45	Square Drive Anvil)	KK100205
16	1-1/4" long Socket Head) (4)	834-638	46	Spline Drive Anvil Assembly (No. 5 Spline)	
17	Handle Cap Screw Washer (4)	588-140	i	for 2945B1	2945-A526A
18	Motor Clamp Washer (2)	MR-207	i	for 2950B1	VW-1030
† 19	Rear Rotor Bearing	834-24	47	Socket Retaining Ball	D04-280
20	Rear End Plate	2950-12	48	Retaining Ball Plunger	845-230
21	Rotor		49	Plunger Spring	2940-231
	for 2945	2945-53	50	Plunger Retaining Pin	845-128
	for 2950	2950-53	51	Dead Handle Bracket	845-364
†•22	Vane Packet (set of 6 Vanes)		52	Dead Handle Bracket Spacer	845-140
	for 2945	2945-42-6	53	Dead Handle (interchanges with Side Spade	
	for 2950	2950-42-6	İ	Handle Assembly)	834-48
23	Cylinder		İ	Side Spade Handle Assembly	
	for 2945	2945-3	İ	(interchanges with Dead Handle)	534-A41
	for 2950	2950-3	54	Side Spade Handle	T15-41
24	Front End Plate	2950-11	55	Spade Handle Stud	534-448
† 25	Front Rotor Bearing	TA-22A	56	Stud Nut	107-73A
26	Cylinder Dowel			Exhaust Deflector Kit	2934-K23
	for 2945	844-98	57	Exhaust Deflector	2934-23A
	for 2950	2950-98	† 58	Gasket	2934-223
27	Motor Housing Assembly	2,500,70	† 59	Silencer	2940P-311
	for 2945	2945-A40	60	Exhaust Baffle	2934-124
	for 2950	2950-A40	61	Exhaust Deflector Screw (2)	R43F-104
28	Reverse Valve Bushing	2934-330S	*	Nameplate	1 1131 101
†•29	Air Port Gasket (2)	R44H-210A	i	for 2945A7, 2945B7 and 2945B1	
† 30	Gasket Retainer (2)	2940-200	l	for 2945A7-EU and 2945B7-EU	2945-301
31	Reverse Valve Assembly	2934-A329	ł	for 2950A7 and 2950B7	
† 32	Reverse Valve Bushing Seal	85H-167	l	for 2950A7 and 2950B7	2950-301
			*		622.202
33	Reverse Lever	2934-658A	*	Nameplate Screw (4)	C32-302
† 34	Reverse Lock Plunger	4U-663B		Wooden Box	2945-96
† 35	Plunger Spring	4U-664	*	Grease Gun	R000A2-228
† 36	Hammer Case Gasket	845-36	*	Tune-up Kit	
37	Hammer Frame Assembly		l	for 2945 (includes illustrated parts	
	for 2945	2945-A703	l	3, 7, 9, 11, 15, 19, 22, 25, 29 [2],	2945-TK2
	for 2950	2950-A703	1	30,[2], 32, 34, 35, 36, 58 and 59)	
38	Hammer Pin (2)		Ī	for 2950 (includes illustrated parts	
	for 2945	2945-704	l	3, 7, 9, 11, 15, 19, 22, 25, 29 [2],	2950-TK2
	for 2950	2950-704	1	30 [2], 32, 34, 35 and 36)	1

^{*} Not Illustrated.


[†] Indicates a Tune-up Kit part.

[•] To keep downtime to a minimum, it is desirable to have on hand certain repair parts. We recommend that you stock one (pair or set) of each part indicated by a bullet (·) for every four tools in service.

⁺⁺ The Hammer Case Bushing is a press fit in the Hammer Case. A .005" oversize Bushing is available and should be used if the nose of the Case has stretched to the extent that a new standard size Bushing fits loosely. The Part No. for a .005" oversize Bushing is 2950-541-S.

[#] Some tools have a single oil chamber plug. For these tools, order one Oil Chamber Plug, Part Number R2-227.

Piped-away Exhaust Kit

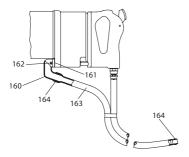

ltem	Part Description	Part Number	
	Piped Away Exhaust Kit		
	without Muffler	2940-K184	
160	Exhaust Adapter	2940-167	
161	Exhaust Adapter Gasket	2940-30	
162	Adapter Cap Screw (No. 10-24 thread x 5/8" Socket Head (2)	AL-638	
163	Exhaust Hose	R21-230	
164	Hose Clamp	R21-31	

(Dwg. TPA559)

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand Office or Distributor.

Related Documentation

For additional information refer to: Product Safety Information Manual 04580916. Product Information Manual 04584835. Maintenance Information Manual 04584306.

Manuals can be downloaded from www.ingersollrandproducts.com.

4 04584462_ed3

Notes:			

Notes:			

Notes:			



© 2012 Ingersoll-Rand, plc

